


CAUTION:

These parts are designed and intended for installation by Auto Trim Professionals, to assure correct comfort and appearance.

NOTE: UTOPIA BACK REST OWNERS WILL REQUIRE MODIFIED SUPPORT BAR
AVAILABLE DIRECTLY FROM UTOPIA BACK REST CO. 1-888-343-3320

1. Remove saddle from bike
2. Carefully remove the staples from the vinyl attaching the cover on the seats underside. NOTE: If you intend to reuse cover be especially careful not to tear the vinyl while removing the staples, this material is quite thin!

3. You will notice a series of holes 20 of them. They each have a plastic bar that crosses each hole and snaps in at each end. These are attach points for the seat cover bolster tie down strings. Do not attempt to remove these bars (you will see the string around them). We feel these bars were intended for one installation only, period. Instead take an exacto knife or razor blade and cut Each of the strings, now remove your cover off The foam.

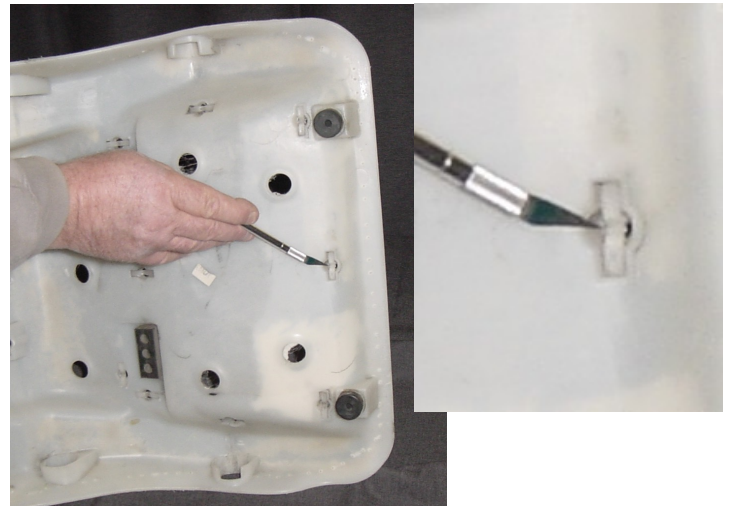

4. Remove the four black rubber seat mount bushings and put them in a safe place, (you loose these you'll be cryin!) Be sure these bushings are reinstalled prior to reupholstering



5. Now pull the original foam off of seat base. be sure to scrape any excess foam residue that may be left on the base. Leave the original glue on, it makes a great anchor for the new adhesive.

before you glue down your new **American Cushions**, it is a good idea to get a piece of about 36 grit sand paper and run it around the sides only of the base, nothing fancy just enough to get any high spots down



6. It is now time to install your new comfort enhanced seat cushions. First is the driver seat. Spray a light coat of glue on the center section only evenly coating both surfaces, be sure not to glue around the sides of the base or foam this could cause installation difficulties. You will glue down the sides later. If you are sure the part is correctly in place push it down and bond it to the base.




7. Now pull seat cover around driver lumbar area of passenger cushion. set the two wire ties at the bottom of the cover through the base of the seat. It is not a good idea to totally tighten these two wire ties yet. Now glue passenger cushion to base same as you did driver.



8. Now you can glue the sides of the base aligning your edges and base mount openings. Lets get those four rubber mounts in there!

9. Install your 20 wire ties being careful not to over tighten. Remember it is nearly impossible to loosen those ?*%! things if you over tighten. A piece of stiff tie wire and some tape is helpful in fishing your wire tie ends back through the base.

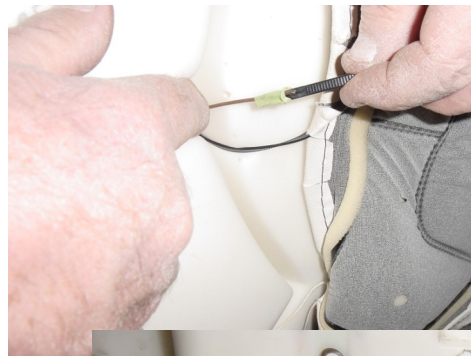

10. Lightly glue and pull around the back of the cover, then pull around the front. Now lightly glue and pull around the sides of the cover. Set and adjust as desired for fit. When you are satisfied with fit and appearance and all wire ties are adjusted adequately, staple and reinstall.



SUPPORT YOUR LOCAL AUTO UPHOLSTERY SHOP